



www.nationalquadcentres.co.uk

ATV - Know Your Limits

Load and tow capacity specifications for popular UK model Utility ATV


Never overload your ATV beyond the manufacturers stated maximum towing and load capacity weights. Check the limits of your ATV and always ensure that every rider knows the limits for safe operation.

Type	Model	Model code	Front Rack Capacity	Rear Rack Capacity	Towing Capacity
Honda					
2wd	Fourtrax 250 S	TRX250TM	15 kg	30 kg	225 kg
2wd	Fourtrax 250 ES	TRX250TE	15 kg	30 kg	225 kg
2wd	Fourtrax 420 S	TRX420TM	30 kg	60 kg	385 kg
2wd	Fourtrax 420 ES	TRX420TE	30 kg	60 kg	385 kg
4wd	Fourtrax 420 S	TRX420FM	30 kg	60 kg	385 kg
4wd	Fourtrax 420 ES	TRX420FE	30 kg	60 kg	385 kg
4wd	Fourtrax 420 S PS	TRX420FPM	30 kg	60 kg	385 kg
4wd	Fourtrax 420 AT	TRX420FA	30 kg	60 kg	385 kg
4wd	Foreman S	TRX500FM	30 kg	60 kg	385 kg
4wd	Foreman ES	TRX500FE	30 kg	60 kg	385 kg
4wd	Foreman AT	TRX500FA	30 kg	60 kg	385 kg
4wd	Foreman AT PS	TRX500FPA	30 kg	60 kg	385 kg
4wd	Rincon AT	TRX680FA	30 kg	60 kg	385 kg
Kawasaki					
2wd	KVF300		20 kg	30 kg	227 kg
4wd	KVF360 4x4		40 kg	70 kg	500 kg
4wd	KVF650 4x4		40 kg	80 kg	567 kg
4wd	KVF750 4x4 EPS		40 kg	80 kg	567 kg
Suzuki					
2wd	Ozark 250		20 kg	30 kg	330 kg
4wd	KingQuad 400 Manual	LT-F400	30 kg	60 kg	450 kg
4wd	KingQuad 400 Auto	LT-A400	30 kg	60 kg	450 kg
4wd	KingQuad 500	LT-A500X	30 kg	60 kg	450 kg
4wd	KingQuad 500 Power Steering	LT-A500PS	30 kg	60 kg	450 kg
4wd	KingQuad 750 Power Steering	LT-A750PS	30 kg	60 kg	450 kg
Yamaha					
2wd	Grizzly 125	YFM125A	5kg	10kg	/
2wd	Grizzly 300	YFM300	20 kg	45 kg	227 kg
4wd	Grizzly 350	YFM350FA	40 kg	80 kg	500 kg
4wd	Grizzly 450 IRS	YFM450FWAD	40 kg	80 kg	600 kg
4wd	Grizzly 450 EPS	YFM450FWAD	40 kg	80 kg	600 kg
4wd	Grizzly 550 EPS	YFM550FWAD	45 kg	85 kg	600 kg
4wd	Grizzly 700 EPS	YFM700FWAD	45 kg	85 kg	600 kg

Information provided was obtained from official manufacturer websites. Every effort has been made to ensure details are correct at time of printing. The information contained on this guide is for reference only and should not be used for actual loads. Some models and details may differ from current UK models. Always check with the manufacturer or UK importer and consult the owners manual for current loading and towing limits.



Ensure all riders know the manufacturer's recommended towing capacity and drawbar loading limit. Always operate within these requirements. Follow the manufacturers advice for your particular machine.
Source: www.hse.gov.uk/pubns/ais33.pdf



Every employer shall ensure that all persons who use work equipment have received adequate training for the purposes of health and safety.
Source: www.legislation.gov.uk/ukxi/1998/2306/regulation/9/made